

# exacqVision

## Technical Reseller Training Course Overview

---

### **PRE-INSTALLATION**

- Network Settings
  - Acquiring static IP licenses
- Camera Settings
  - Determining average image sizes and frame rates to calculate storage space needed

### **SETUP MODE**

- System Setup
- Adding IP Cameras
  - Using the exacqVision IP Camera Quickstart Guide
- Camera Recording Setup
  - IP cameras
  - Analog cameras
- Camera Setup
  - Naming cameras
  - Maximizing motion masks and areas
  - Picking the right compression mode
  - Setting up PTZ cameras
- Trigger Input Setup
- Alarm Output Setup
- Storage Setup
- Setting up and using notifications
- Auto Export Setup
- Event Linking
- Event Monitoring
- Scheduling recording to get the most out of exacqVision
- Adding Additional Users
  - Specifying what each user can and cannot do
- Adding Additional exacqVision Servers
- Live Viewing
- Export Settings
- Working with your Operating System
- Installing the Client
- Searching for Video
- exacqVision Edge

### **ENTERPRISE FEATURES**

- Map Setup
- My Enterprise