

## 1 Requirements

The RS2 Access It! Universal integration works with any exacqVision system. This document assumes that the exacqVision client and server and the Access It! Universal client and server are installed and running.

### Minimum software requirements

- RS2 Access It! Universal version 3.0.11 or higher
- exacqVision client version 2.6 or higher


## 2 Installation

1. Download the RS2 exacqVision integration files from [www.RS2tech.com](http://www.RS2tech.com) (if necessary, obtain an account from RS2).
2. Open the “RS2 exacqVision Viewer Integration” document included in the file download.
3. Complete the installation using with the procedure in “Software Setup” in the RS2 guide.

### NOTES:

- exacqVision client must be installed on the same workstation as the RS2 Access It! Universal client.
- The exacqVision servers should have at least one account with credentials to connect to Access It! Universal.

Here is an example of an integrated exacqVision camera named Input 1.

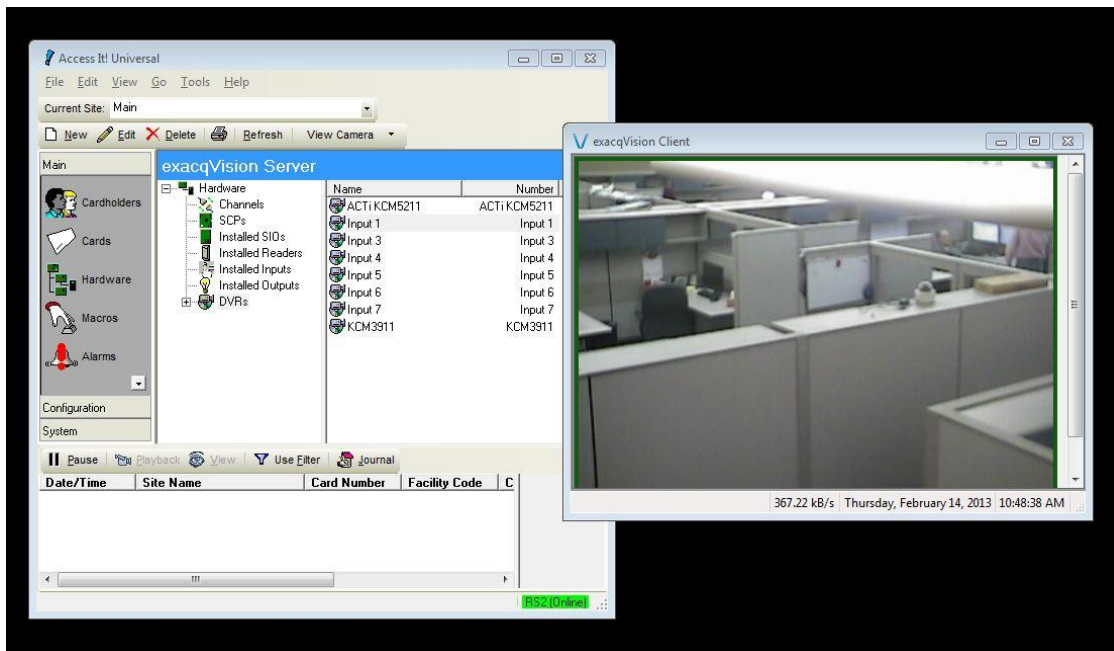

## 3 Details

### exacqVision's command line interface

**NOTE:** This section is included for information only. No user action is required.

When you run setup.exe for the RS2exacqVision integration, a file named evRS2.exe is saved in an exacqVision directory, normally C:\Program Files(x86)\exacqVision\Client. When a Access It! Universal user views cameras that have been integrated, evRS2.exe receives parameters from the Access It! Universal program and generates the eVCmdLine.xml file that conforms to Exacq's ev-CLI protocol. Then evRS2.exe calls exacqVision's CLI with the eVCmdLine.xml file as its argument. This launches the exacqVision client with the parameters specified in the eVCmdLine.xml file. An example of the command line call is shown here:

```
edvrclient.exe -FeVCmdLine.xml
```

The definition of exacqVision's CLI and its associated xml file can be found at [www.exacq.com/integration/developers.html](http://www.exacq.com/integration/developers.html). If necessary, obtain a reseller password from Exacq to view this information.



## 4 Troubleshooting / Common Problems

### Account not configured correctly on the exacqVision server

An account should be created on the exacqVision server specifically for the RS2 Access It! Universal client software to log in to. Be sure this account has at least Live+Search permission.

### Connection to an exacqVision Server fails

Be careful not to confuse the exacqVision server username and password with the Windows username and password of the exacqVision server. The username and password you supply to Access It! Universal during the integration setup process should be the same credentials used for the account created in the exacqVision server for use with Access It! Universal. Do not use the username and password for the Windows operating system for this purpose.

### Access It! Universal client and exacqVision client need to co-exist

Any workstation with an Access It! Universal client installed for the purpose of viewing video from an exacqVision integration must also have exacqVision Client installed.

